


1.2.2.4 Component Parts For Types E and VE Elements

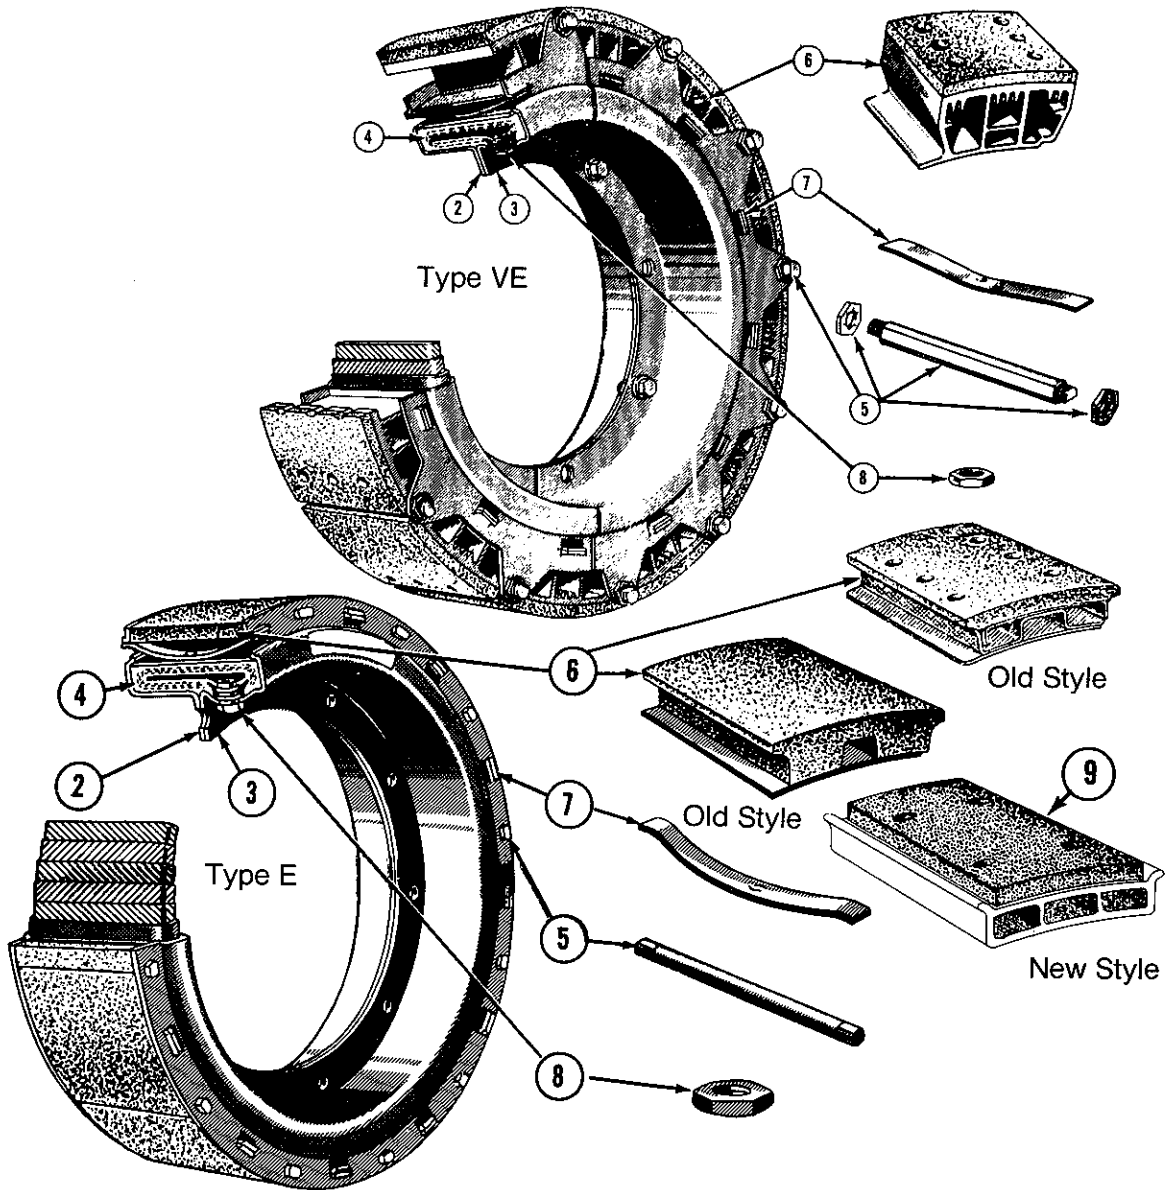

ITEM	DESCRIPTION
2	Housing Half
3	Housing Half w/Valve Hole
4	Tube
5	Torque Bar*
6	Friction Shoe Assembly
7	Release Spring
8	Tube Stem Nut
9	Replacement Friction Blocks & Rivet

*Nuts required for VE Elements